

4. OPERATING INSTRUCTIONS

4.1 KEYBOARD

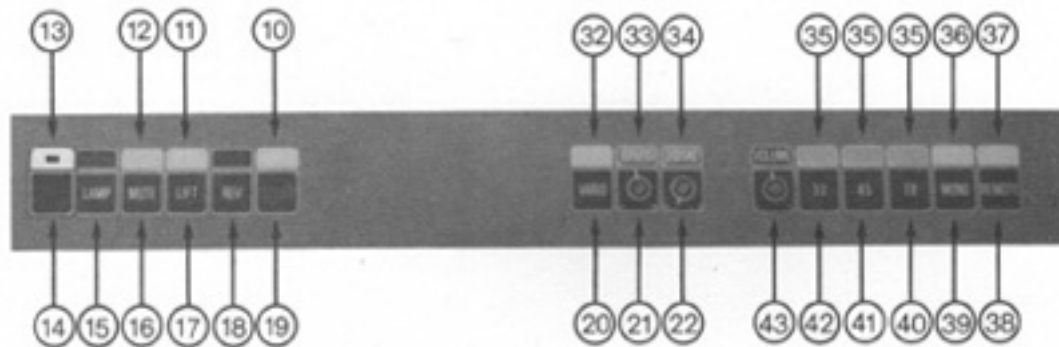


FIG. 15

4.2 SPEED SELECTION

When power is applied, the turntable will automatically switch to 33 1/3 rpm. The different speeds are selected by simply pressing one of the other buttons.

A LED on each button lights up when a speed has been selected.

If buttons 33 and 45 are pressed at the same time, speed is selected according to the position of the center hub of the platter, i.e.:

- center hub in down position = 33 rpm
- center hub in up position = 45 rpm

In this case the LED of the selected speed is lit, the other one is flashing. Speed control by center hub is disabled by pressing any of the three speed buttons.

Speed switching by means of buttons can take place only when the machine is in stop position. Speed switching by means of center hub can take place also when platter is rotating.

Speed selection as described above is also remote controllable.

4.3 STEREO/MONO SWITCHING

By pressing button "MONO", channels A+B are mixed and the signal is then supplied on the lefthand channel (S).

In the MONO mode, the corresponding orange LED (36) is lit; by pressing again the same button, the machine is switched to STEREO and the LED is OUT.