

### 1.7.3 SIGNAL OUTPUTS CONNECTION

Signal outputs and external loudspeaker jacks are located on the rear of the unit, while headphone jack is located on the front of the unit. Inside wiring of above jacks is shown in the diagram at page 33.

### 1.7.4 REMOTE CONTROL CONNECTION

The remote control connector is a 25-pin plug: see diagram below (fig. 12).

All button switches for remote controlling of the different functions must be of normally open type.

Common LEDs are employed for luminous indication; lamps can be used as well, provided a separate supply is foreseen since the unit max output is 0,5 Amp.

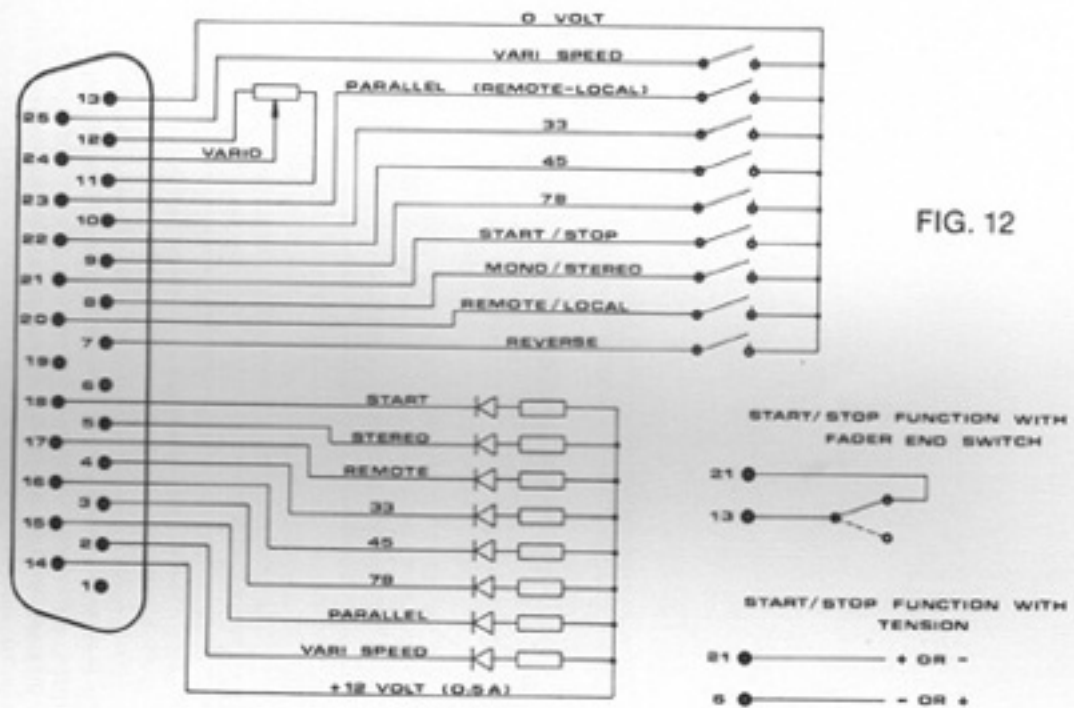


FIG. 12