

# PROFESSIONAL TURNTABLE SERIES TRS 9000 OPERATING MANUAL

	page
<b>1. PREPARATION</b>	
1.1 Unpacking .....	1
1.2 Releasing the transport locks .....	1
1.3 Rack or console mounting .....	2
1.4 Mounting of pickup cartridge into shell .....	2
1.5 Tonearm balancing and adjusting of stylus tracking force .....	3
1.6 Antiskating device adjustment .....	5
1.7 Connections .....	6
<b>2. NOMENCLATURE</b> .....	9
<b>3. INITIAL OPERATING PROCEDURE</b> .....	10
<b>4. OPERATING INSTRUCTIONS</b> .....	
4.1 Controls location .....	14
4.2 Rotating speed selection .....	14
4.3 Stereo/Mono switching .....	14
4.4 Cueing to a desired point in the program .....	15
4.5 Reverse rotation .....	16
4.6 Starting directly at the turntable .....	16
4.7 Remote starting .....	16
<b>5. TECHNICAL DESCRIPTION</b>	
5.1 Drive system .....	17
5.2 Damping system .....	19
5.3 Pickup arm .....	19
5.4 Amplifiers .....	20
<b>6. SERVICE</b>	
6.1 Pickup arm .....	22
6.2 Lift .....	24
6.3 Braking .....	24
6.4 Power supply .....	26
6.5 Power motor control .....	27
6.6 Speed motor control .....	28
6.7 Logic control 1 .....	29
6.8 Logic control 2 .....	30
6.9 Out put amplifier .....	31
6.10 Preamplifier .....	32
6.11 Wiring diagram .....	33
6.12 Mother board .....	34
6.13 Keyboard .....	35
6.14 Peripheric PCB .....	36
<b>7. TECHNICAL DATA</b>	
7.1 Complete unit .....	37
7.2 Tone arm .....	37
7.3 Amplifiers .....	38
<b>8. DIMENSIONS</b>	
8.1 Rack version .....	39
8.2 Console version .....	40
<b>9. PART LIST</b>	
9.1 Suggested spare parts list .....	41