

3.8 LIFTING AND LOWERING OF TONEARM

The tonearm is lifted or lowered by means of a small geared motor controlled by push button "LIFT" (17).

When tonearm is raised, the corresponding orange LED is lit.

In the lowered position, check that the stylus of the pickup cartridge balances exactly with the plane of the record; also check distance between tonearm and lift plate (see page 3).

3.9 PICKUP ILLUMINATION

Pressing push button LAMP (15), a powerful halogen lamp illuminates with grazing and adjustable beam the record surface to show stylus position and to facilitate cueing of the desired point.

Beam horizontal adjustment can be made by rotating ring nut (A); vertical adjustment by means of screw (B) (see fig. 13).

The lamp will remain lit for approx 20 seconds.

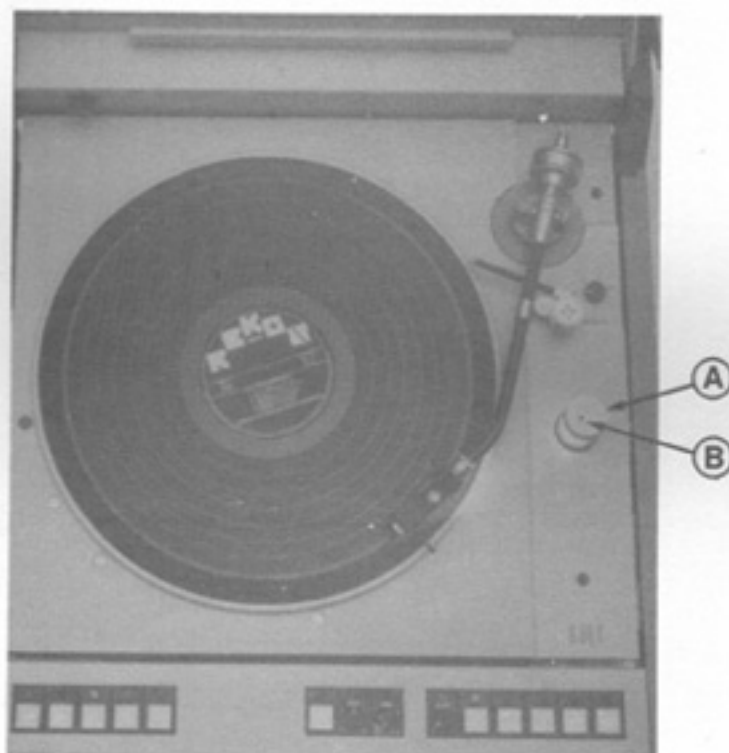


FIG. 13

3.10 REMOTE CONTROL

Pressing the button REMOTE (38) puts the machine into the "remote ready" mode, therefore the local START-REV-VARIO-33-45-78 are disabled.

It is however possible to activate both local and remote buttons by pressing the button "PARALLELO" on the remote unit.

Pressing again the button "REMOTE" (38) puts the machine in the "local" mode, i.e. only local buttons are activated.

Remote control activation is indicated by the lighting up of the button "REMOTE" orange LED.