

1. PREPARATION

1.1 UNPACKING

Set transit carton in an upright position (upright position is marked on the carton surface), then cut binding straps and lift off carton lid.

Remove all rubber foam packing material, carefully removing following accessories from its partitioned sections:

- one bag containing the shell and the relevant small parts necessary to fit any type of pickup cartridge
- one bag containing the counterweight.

To remove the complete chassis unit, lift off the same by means of the proper cavities at each side.

All the packing material should be stored for future transport needs: if this is the case do not forget to fasten the chassis, locking all screws as well as the motor large knurled screw; also remove counterweight and shell from tonearm.

1.2 RELEASING THE TRANSPORT LOCKS

Remove rubber mat, then remove platter carefully holding it with two fingers inserted into its two holes. Platter is conically splined to the shaft.

Remove the two screws that secure the suspended chassis during transport (see fig. 1).

Re-install platter, making sure that its hole spline fits to the shaft.

Motor is locked in order to protect it against vibrational strains during transport. Release motor lock by unscrewing, until its arresting, the large knurled screw at the motor bottom (see fig. 2).

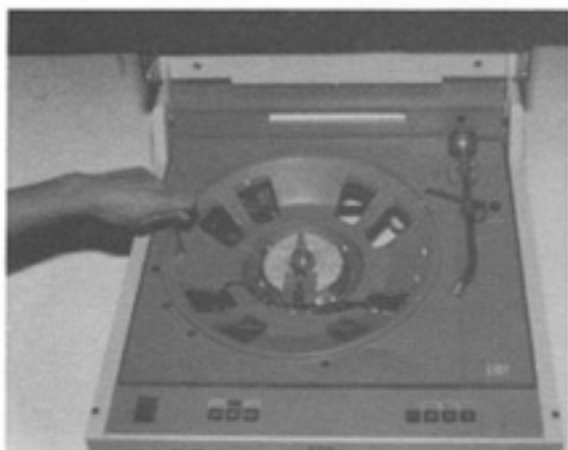


FIG. 1

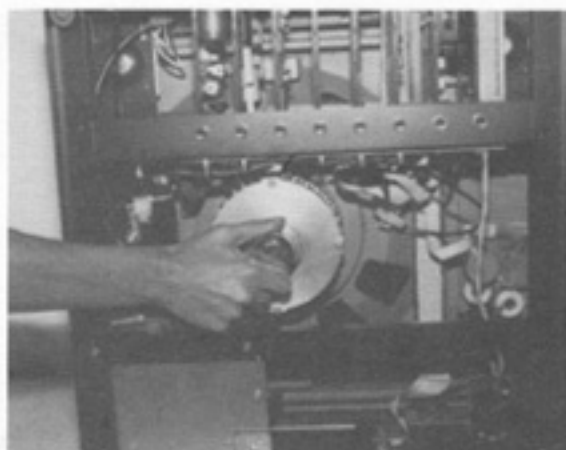


FIG. 2